

# 3m Pop Up Gazebo

**KINGFISHER**  
outdoor living

**Please read the following instructions carefully and keep for future reference.**

## SAFETY NOTES

This product is intended for domestic and outdoor use only.

Although the gazebo provides shade, users of this product should still wear protection against the burning effects of the sun.

Always use the gazebo on a flat, level and stable surface.

Always secure the gazebo in place using the ground pegs and guide ropes and optionally with gazebo weights.

Do not jump on or use excessive force with this product.

Do not use or leave this product exposed to adverse weather conditions.


Do not allow children to climb on this product.

Handle with care. Do not drag the gazebo across the ground. We recommend two people lift the gazebo if it requires moving.

Do not use a barbecue or any fire related product under the cover of the gazebo.

Do not erect the gazebo in strong winds.

## HOW TO SET UP YOUR POP-UP GAZEBO

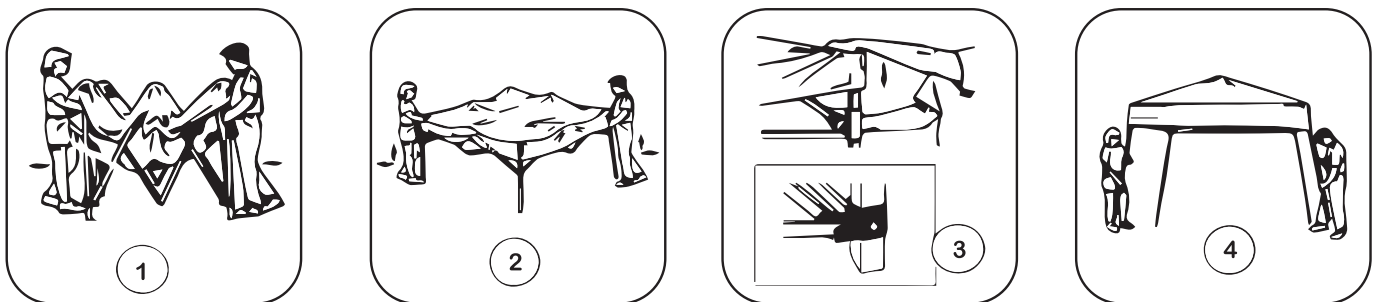

**Please follow these instructions to ensure your pop-up gazebo is erected correctly. Take care to avoid trapping your hands or fingers when setting up your gazebo. 2 people are required to help set up this gazebo.**

Remove the pop-up gazebo from the carry bag and stand on its feet in the centre of the area to be sheltered.

Each person should stand on opposite sides of the gazebo and hold the two outer legs on their side. Slightly raise the frame off the ground and step backwards until the frame is opened out to each persons' full outstretched arm length.

Each person should move to a single corner, opposite each other (see diagram 2), holding the outer leg. Again slightly raise the frame off the ground, stepping backwards until the frame is fully opened. *(Be careful not to pinch or trap your fingers, or to pull too hard on the leg/supports as this may cause them to bend)*

Engage the slider at each corner, by pushing up with one hand while holding down the top of the leg with the other hand (see diagram 3). A snap button will engage when the slider locates the position hole. Repeat this process on each corner leg. At this point when the frame is fully opened and locked, it is advised that you fit the cover over the frame.

Each person should place a foot on the foot plate of adjacent legs and lift the leg frame. At the same time, this will slide the inner leg out (see diagram 4). Lift the leg frame until the inner leg snap button locks into place. Repeat this process on the other two legs.





Square up the pop-up gazebo, and attach the velcro tabs, located on the underside of the cover, around the frame struts.

Apply pegs to the holes at the bottom of each leg to secure the frame to the ground. Use the guide ropes attached at each corner of the roof cover and pegs to secure the pop-up gazebo to the ground.

# 3m Pop Up Gazebo

**KINGFISHER**  
outdoor living

## HOW TO TAKE DOWN YOUR POP-UP GAZEBO

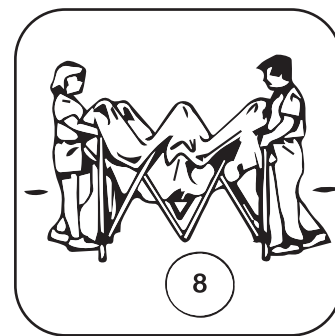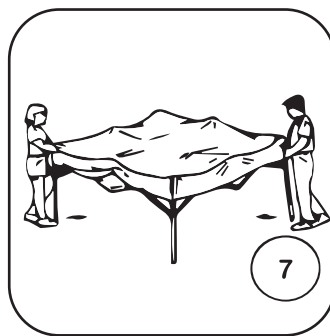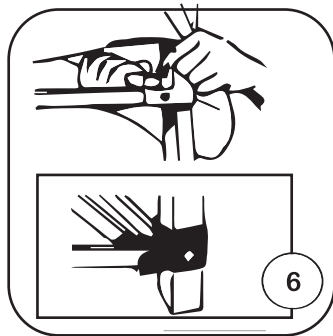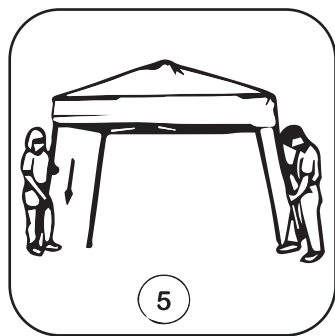

**Please follow these instructions to ensure your pop-up gazebo is taken down correctly. Take care to avoid trapping your hands or fingers when taking down your gazebo. 2 people are required to help take down this gazebo.**

Remove any leg pegs and guide ropes, and undo the velcro straps from the top cover from around the frame.

Each person should each lift two adjacent outer legs slightly, push in the snap button and push the telescopic inner legs into the outer legs, decreasing the height of the legs. Repeat this process on the remaining two legs.

Release the slider at each corner with slight upward pressure with one hand whilst pushing in the snap button to release the slider. With the other hand, push the slider down past the snap button. (*Be careful not to pinch or trap your fingers*)

Each person should move to a single corner opposite each other (see diagram 7) and slightly lift off the ground. Shake the canopy a little, and pull hands apart while stepping forward until the unit is partly closed. Remove the cover at this point.

Hold the two outer legs, slightly lift off the ground and push together to fully close.

Make sure the canopy material is completely dry before returning to its storage bag.

## CLEANING, STORAGE AND MAINTENANCE

Clean this product with a damp cloth with or without mild detergent. Do not machine wash. Do not bleach. Do not iron. Do not tumble dry. Always allow to dry completely before using or placing for storage in order to enjoy it for as long as possible.

Store the gazebo in the storage bag included and if possible in the box the product came in originally. Ensure the gazebo is completely dry before storing away.

The frame of this gazebo is made from steel. Rust is unavoidable when metal product is used outdoors. Keep the furniture out of bad weather as much as possible. Avoid damaging the powder coating on metal parts. Coat the metal parts with a thin layer of spray on car wax of your choice. This temporarily protects the metal from the water and oxygen in the air. Replenish the wax coating periodically to retain its protective qualities.

