

User Manual

Multi-coloured Solar Powered 50 String Light Set (SLSL4)

Please keep for reference. This is not a toy, keep out of reach of children. Bulbs included are not replaceable. Never try to disassemble the solar light.

Choosing the location

The solar panel converts sunlight into energy that is then stored by the rechargeable battery. The performance of the light set is determined by the amount of sunlight that reaches the solar panel. This will be affected by a number of factors.

- **Location**
For a maximum charge please place the solar panel in direct sunlight and position away from trees, buildings, and fences that may cast a shadow at different times of the day. Please ensure that the solar panel is placed away from any sources of light, such as windows or street lighting, as this might be detected as sunlight and prevent the lights to turn on.
- **Cleanliness**
Please ensure the top of solar panel is clean, free from debris and snow in the winter months.
- **The weather conditions**
If the weather has been cloudy or overcast during the day less sunlight will reach the panel.
- **Time of the year**
There are less daylight hours in winter to recharge the battery.

First Time Use

There is a switch located on the base of the solar panel, slide the switch to '1' position to activate the light and solar panel in static mode, or slide right to '2' position for flashing mode. Sliding to middle 'OFF' position turns the light and solar panel off.

When the environment turns dark, the solar light will automatically begin to work. The light will only work if there is enough power stored in the battery.

If the light does not work please check the following:

- Make sure the switch is in '1' or '2' position
- Check the battery to ensure that it has secure contact with the terminals;
- Ensure that the solar panel is placed in sunny location and not in shady area. The solar panel faces towards the sun and is positioned away from any sources of light at night.

If the light stops working after it has been used for a long time, the battery may be beyond its lifespan. You may open the cover of the battery to replace with new rechargeable battery. Specification of the included battery: AA 1.2V 300 mAh Ni-MH. Replace with similar.

Battery Safety and Disposal

Dispose of batteries responsibly at waste recycling facility. Do not dispose with household waste. Do not dispose in the fire or incinerate as they may explode. Never use non-rechargeable batteries in this product. Never try to dismantle the battery.